


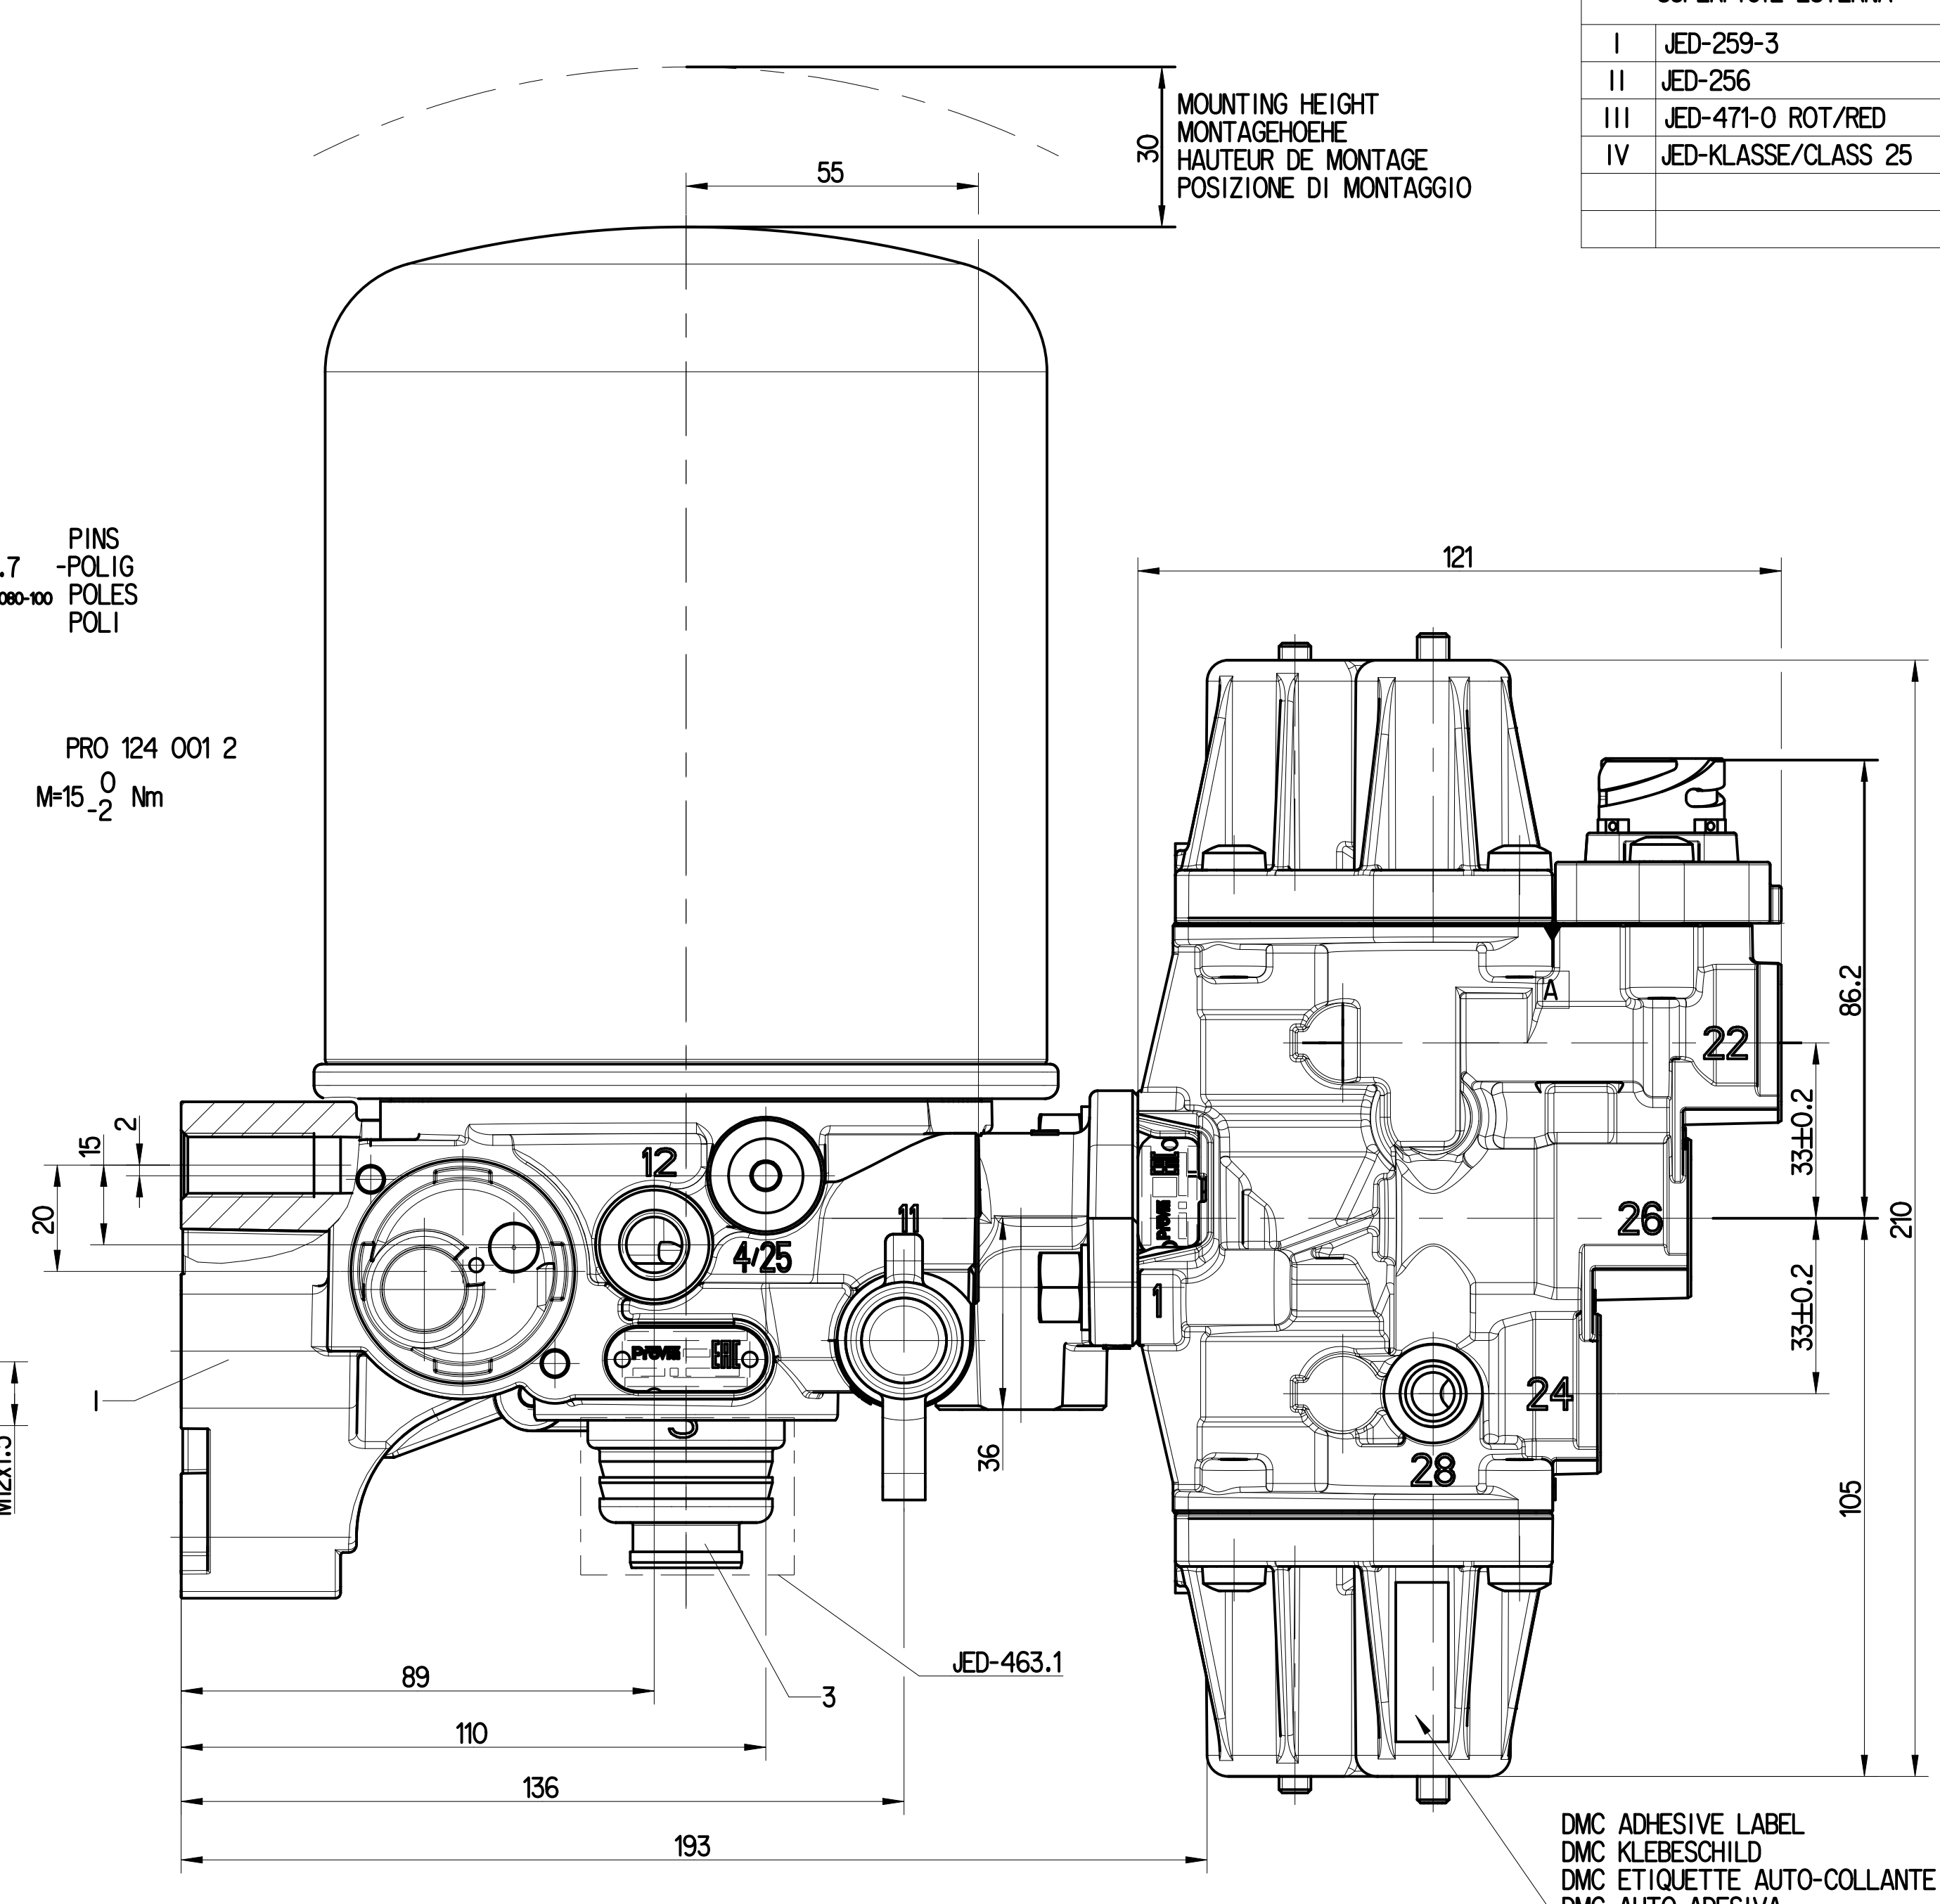
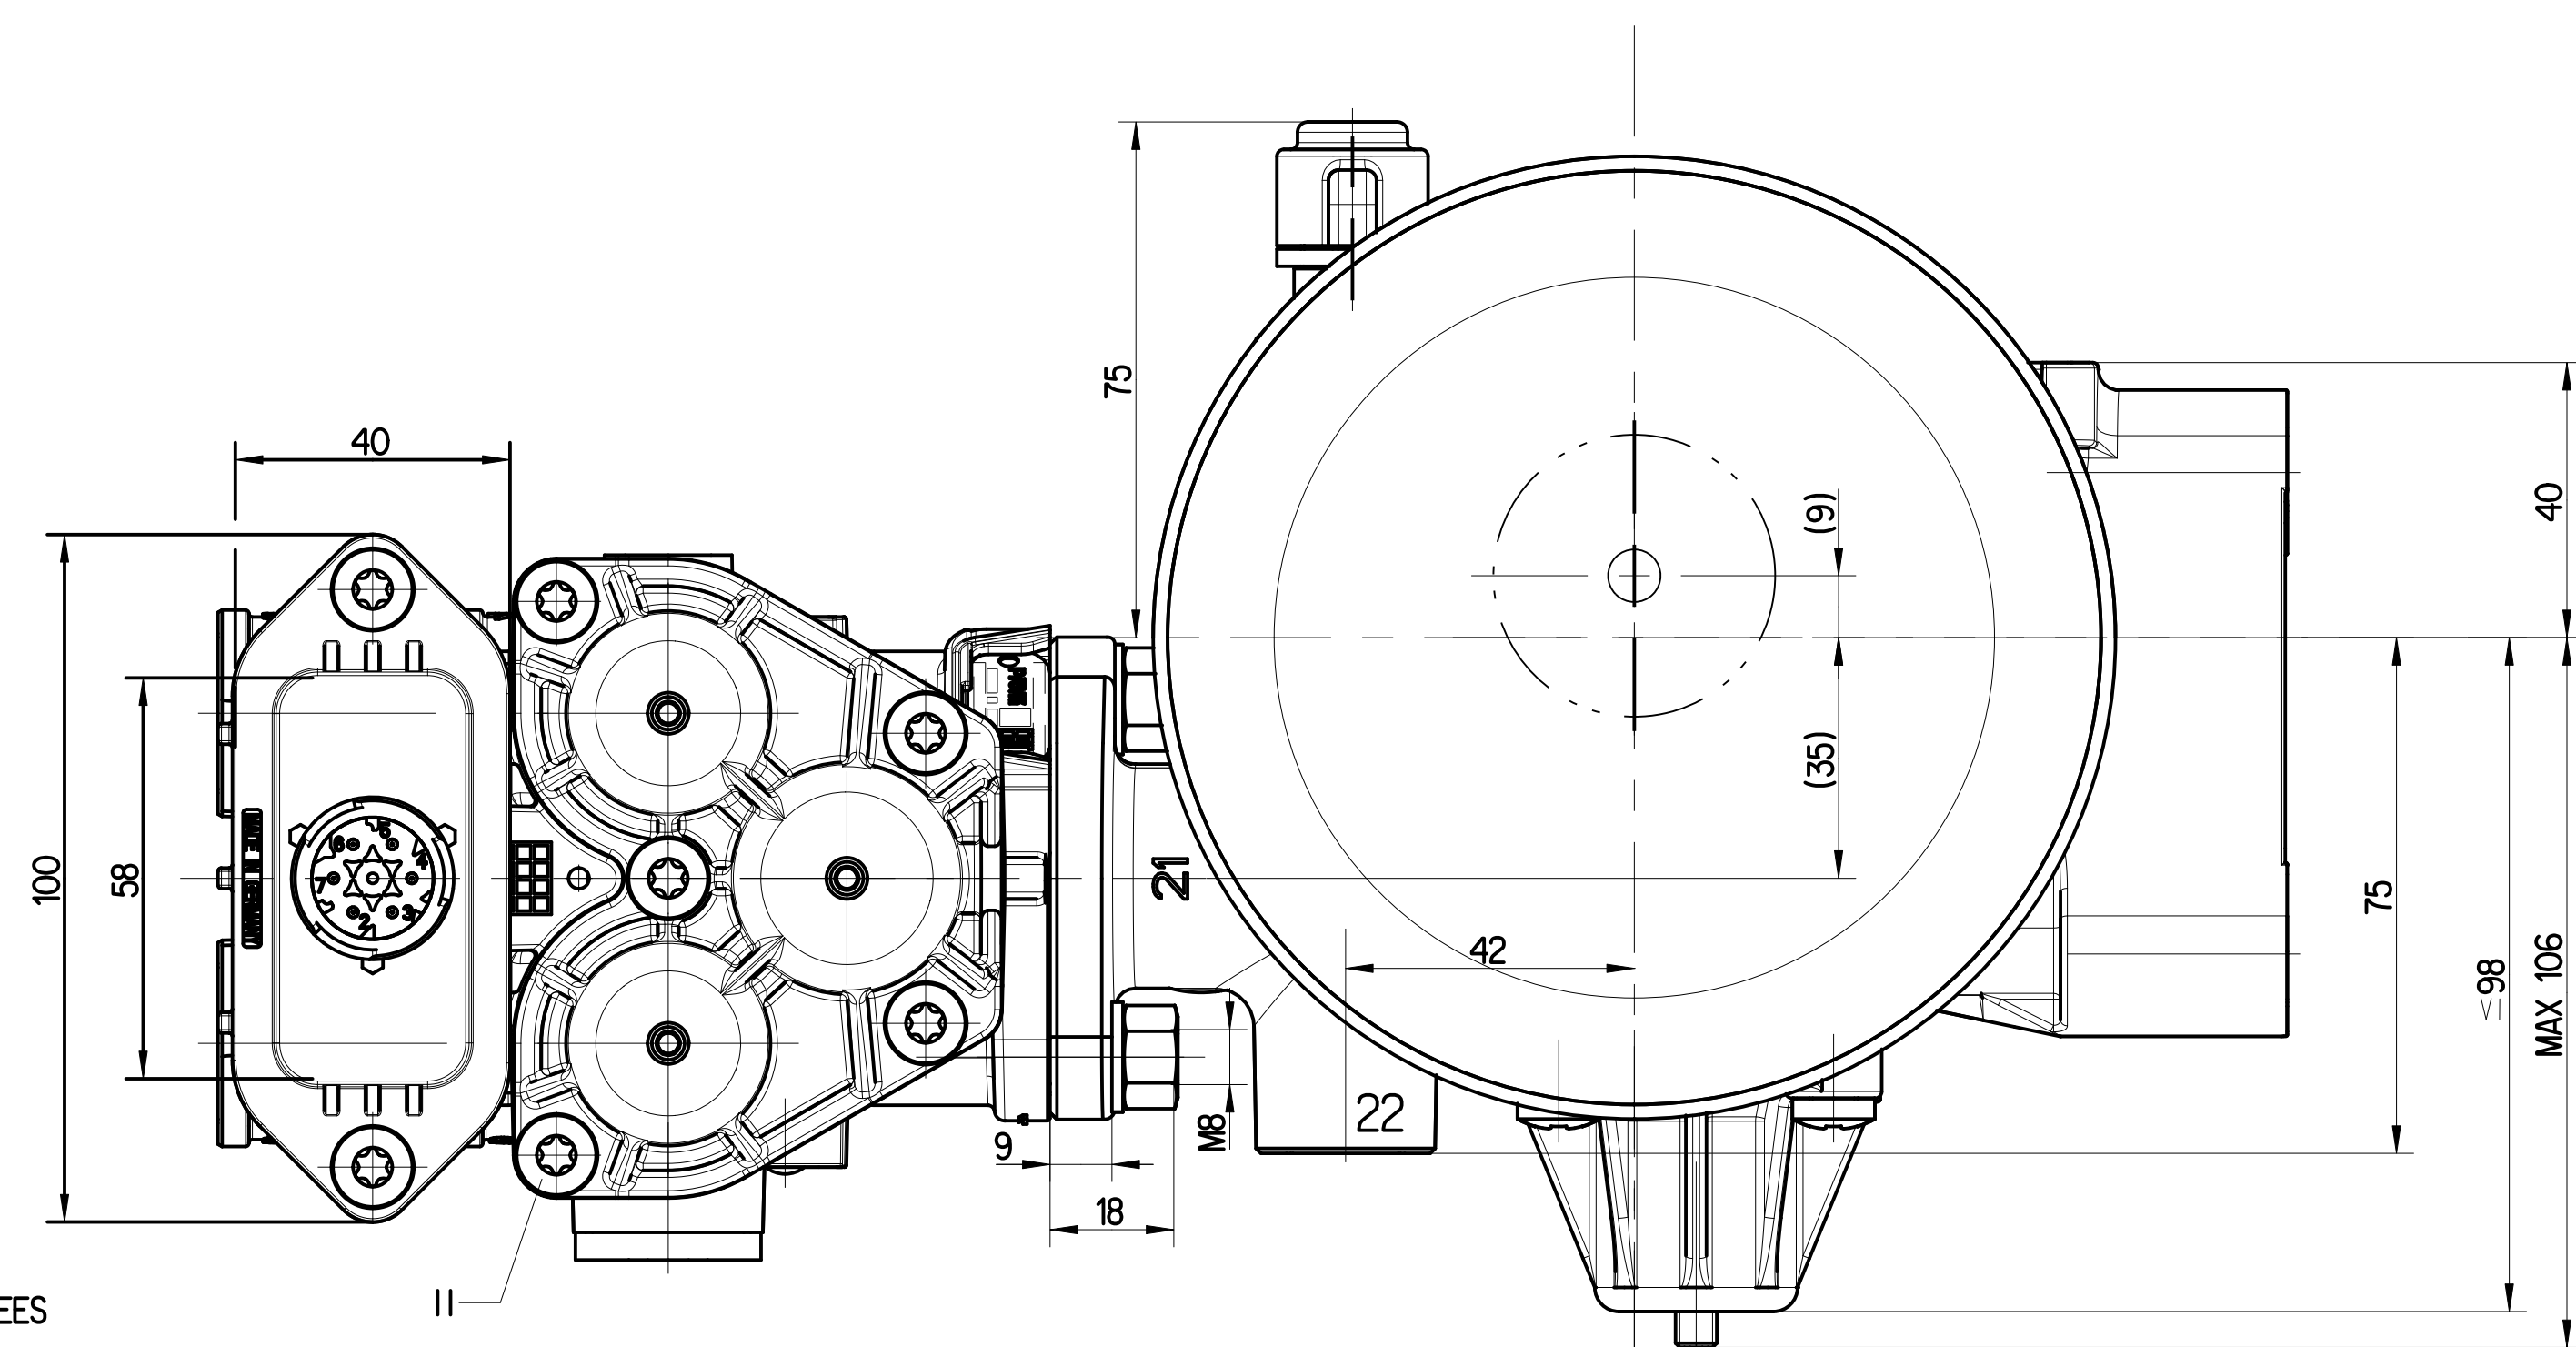


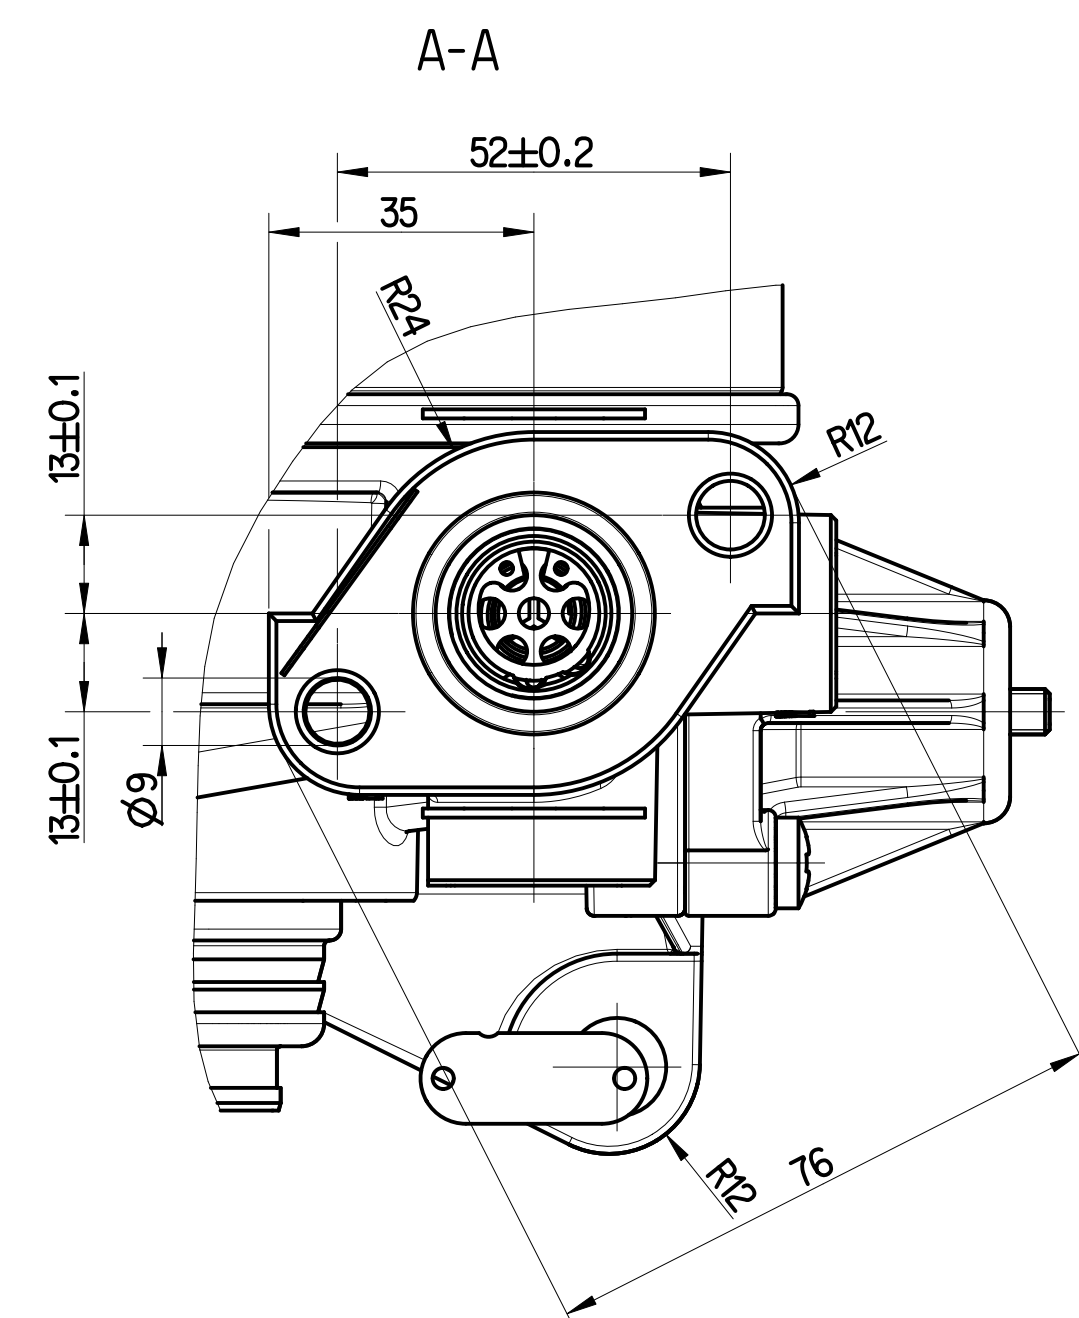

	EXTERNAL SURFACE AEUSSERE OBERFLAECHE SURFACE EXTERIEURE SUPERFICIE ESTERNA
I	JED-259-3
II	JED-256
III	JED-471-0 ROT/RED
IV	JED-KLASSE/CLASS 25

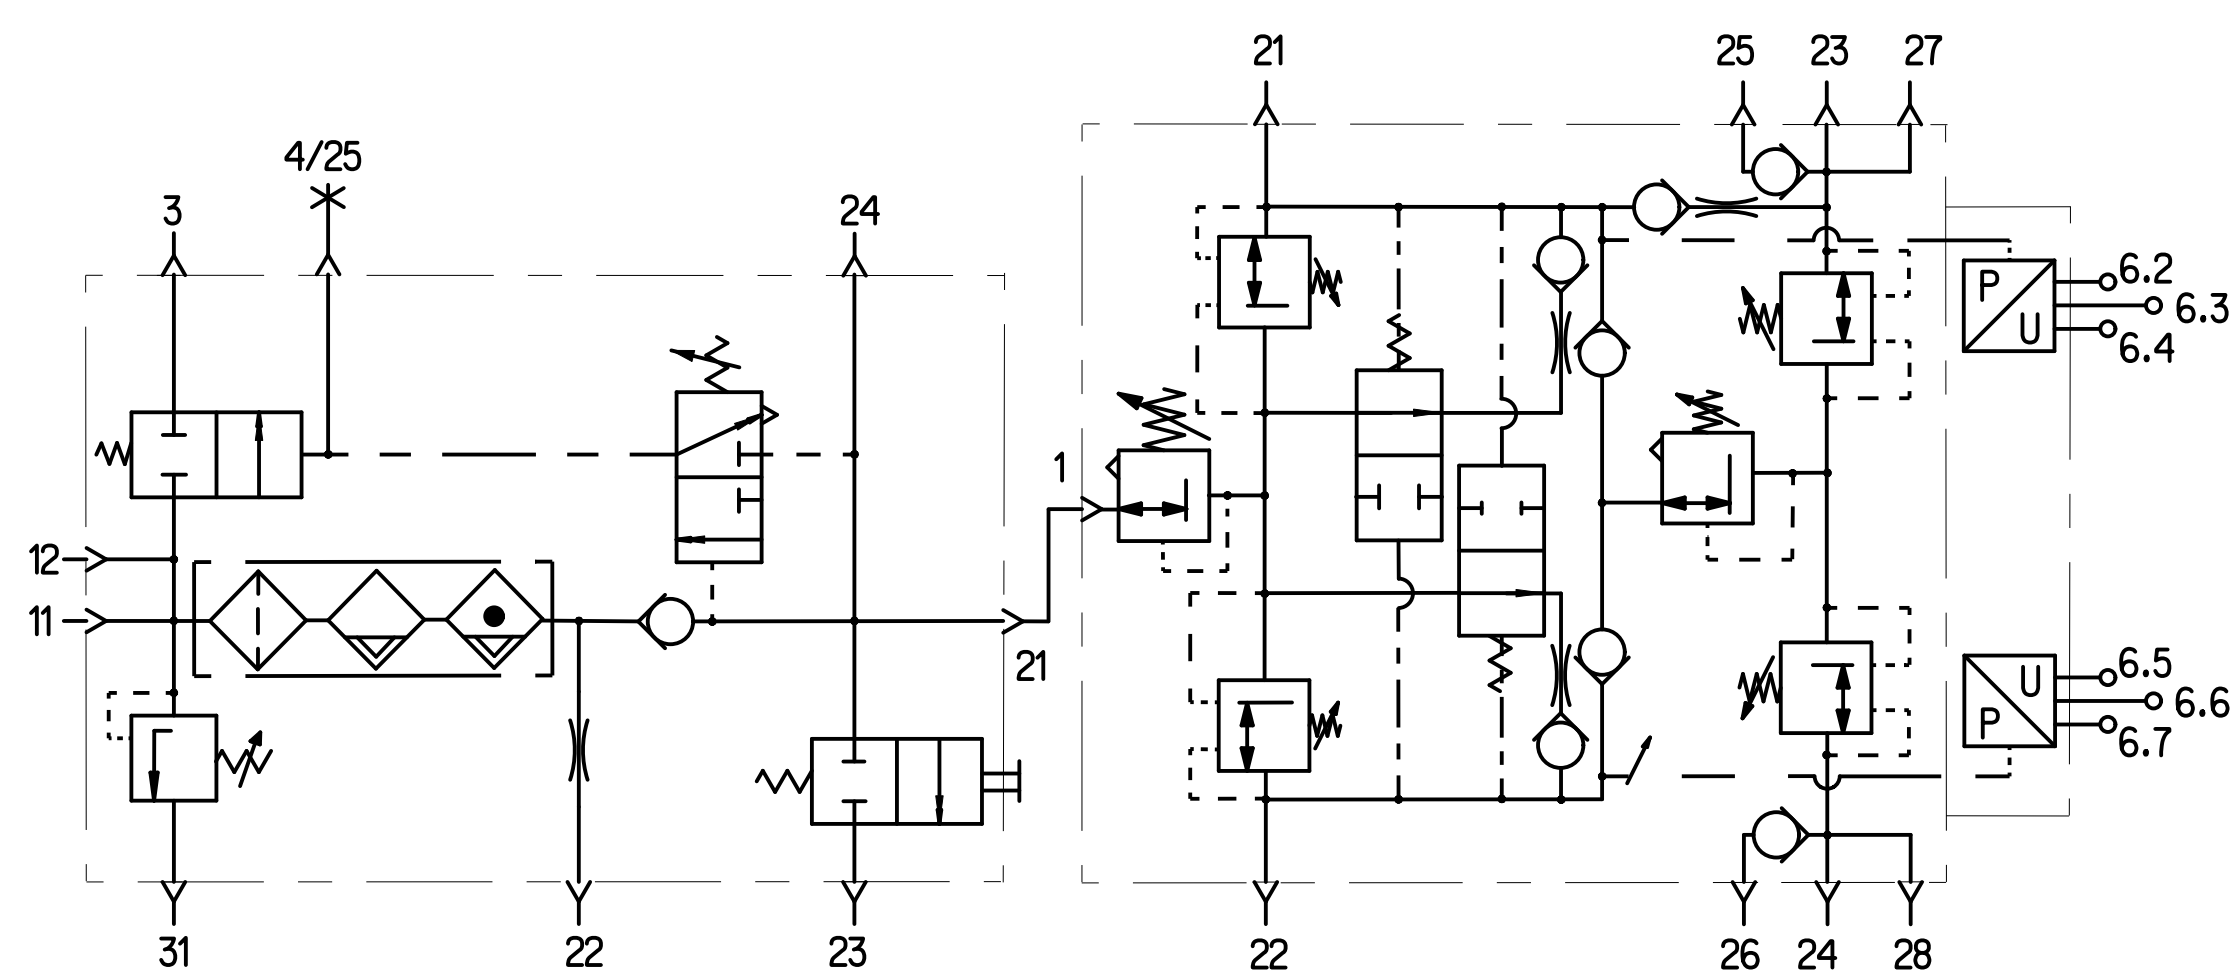

AIR DRYER LUFTTROCKNER DESSICATEUR D'AIR ESSICCATORE D'ARIA			FOUR CIRCUIT PROTECTION VALVE VIERKREIS-SCHUTZVENTIL VALVE DE PROTECTION (A 4 CIRCUIT) VALVOA DI PROTEZIONE (A 4 CIRC.)			
PORT ANSCHLUSS ORIFICE ORIFIZIO	FUNCTION FUNCTION FONCTION FUNZIONE	THREAD GEWINDE FILETAGE FILETTATURA	PORT ANSCHLUSS ORIFICE ORIFIZIO	FUNCTION FUNCTION FONCTION FUNZIONE	THREAD GEWINDE FILETAGE FILETTATURA	CIRCUIT KREIS CIRCUIT CIRCUITO
11	FROM THE COMPRESSOR VOM KOMPRESSOR PROVENANT DU COMPRESSEUR PROVENIENTE DEL COMPRESSORE	M22x1,5 JED-152	1	FROM AIR DRYER VOM LUFTTROCKNER DE DESSICATEUR D'AIR ESSICCATORE D'ARIA	M22x1,5 JED-388	
12	EXTERNAL FILLING FREIMBEFUELLUNG ALIMENTATION DE L'EXTERIEUR ALIMENTAZIONE SEPARATA	M12x1,5 JED-152	21	SERVICE BRAKE BETRIEBSBREMSE FREINAGE FRENATURA	M22x1,5 JED-388	1
21	TO PROTECTION VALVE ZUM SCHUTZVENTIL AU VALVE DE PROTECTION A VALVOA DI PROTEZIONE	M22x1,5 JED-152	22	SERVICE BRAKE BETRIEBSBREMSE FREINAGE FRENATURA	M22x1,5 JED-388	2
22	TO RESERVOIR FOR REGENERATION AIR ZUM REGENERATIONS-LUFTBEHAELTER AU RESERVOIR D'AIR DE REGENERATION AL SERBATOIO PER L'ARIA RIGENERATA	M16x1,5 JED-388	23	TRAILER BRAKING SYSTEM ANHÄNGER BREMSANLAGE SYSTEME DE FREINAGE DE LA REMORQUE FRENATURA DEL RIMORCHIO	M22x1,5 JED-388	3
23	TIRE INFLATION DEVICE REIFENFUELLANSCHLUSS PRISE POUR GONFLAGE PNEU PRESA PER GONFIAGGIO PNEUM.	M12x1,5 thread length: 8 mm	25	PARKING BRAKING SYSTEM FESTSTELLBREMSANLAGE DISPOSITIF DE FREINAGE DE STATIONNEMENT DISPOSITIVO DI FRENATURA DI STAZIONAMENTO	M22x1,5 JED-388	3
24	TO AIR SUSPENSION RESERVOIR ZUM LUFTFEDERBEHAELTER AU RESERVOIR DE LA SUSPENSION PNEUMATIQUE A SERBATOIO DELLA SOSPENSIONE PNEUMATICA	M22x1,5 JED-388	27	PRESSURE SWITCH DRUCKSCHALTER INTERRUPTEUR DE PRESSION INTERRUTTORE A PRESSIONE	M12x1,5 JED-152	3
4/25	CONTROL PORT/DELIVERY OF ENERGY TO COMPRESSOR CONTROL STEUERANSCHLUSS/ENERGIEABFLUSS ZUR KOMPRESSOR STEUERUNG ORFICE DE COMMANDE/ALIMENTATION EN ENERGIE DE LA COMMANDE DE COMPRESSEUR ORIFIZIO DI COMANDO/MANDATA AL COMANDO DEL COMPRESSORE	M10x1 JED-388 (PLUGGED)	24	AUXILIARIES HILFSMITTEL AUXILIAIRES AUSILIARI	M22x1,5 JED-388	4
3	EXHAUST FOR COMPRESSOR IDLING ENTLUEFTUNG BEI KOMPRESSOR-LEERLAUF ECHAPPEMENT POUR MARCHÉ A VIDE DU COMPRESSEUR SCARICO PER MARCIA A FOLLE DEL COMPRESSORE		26	OPERATION OF CLUTCH/GEARBOX BETÄTIGUNG VON KUPPLUNG/GETRIEBE ACTIONNEMENT D'EMBRAYAGE/BOITE VITESSES AZIONAMENTO FRIZIONE/CAMBIO	M22x1,5 JED-388	4
			28	PRESSURE SWITCH DRUCKSCHALTER INTERRUPTEUR DE PRESSION INTERRUTTORE A PRESSIONE	M12x1,5 JED-152	4
			6	PRESSURE SENSOR DRUCKSENSOR CAPTEUR DE PRESSION SENSORE DI PRESSIONE		1/2

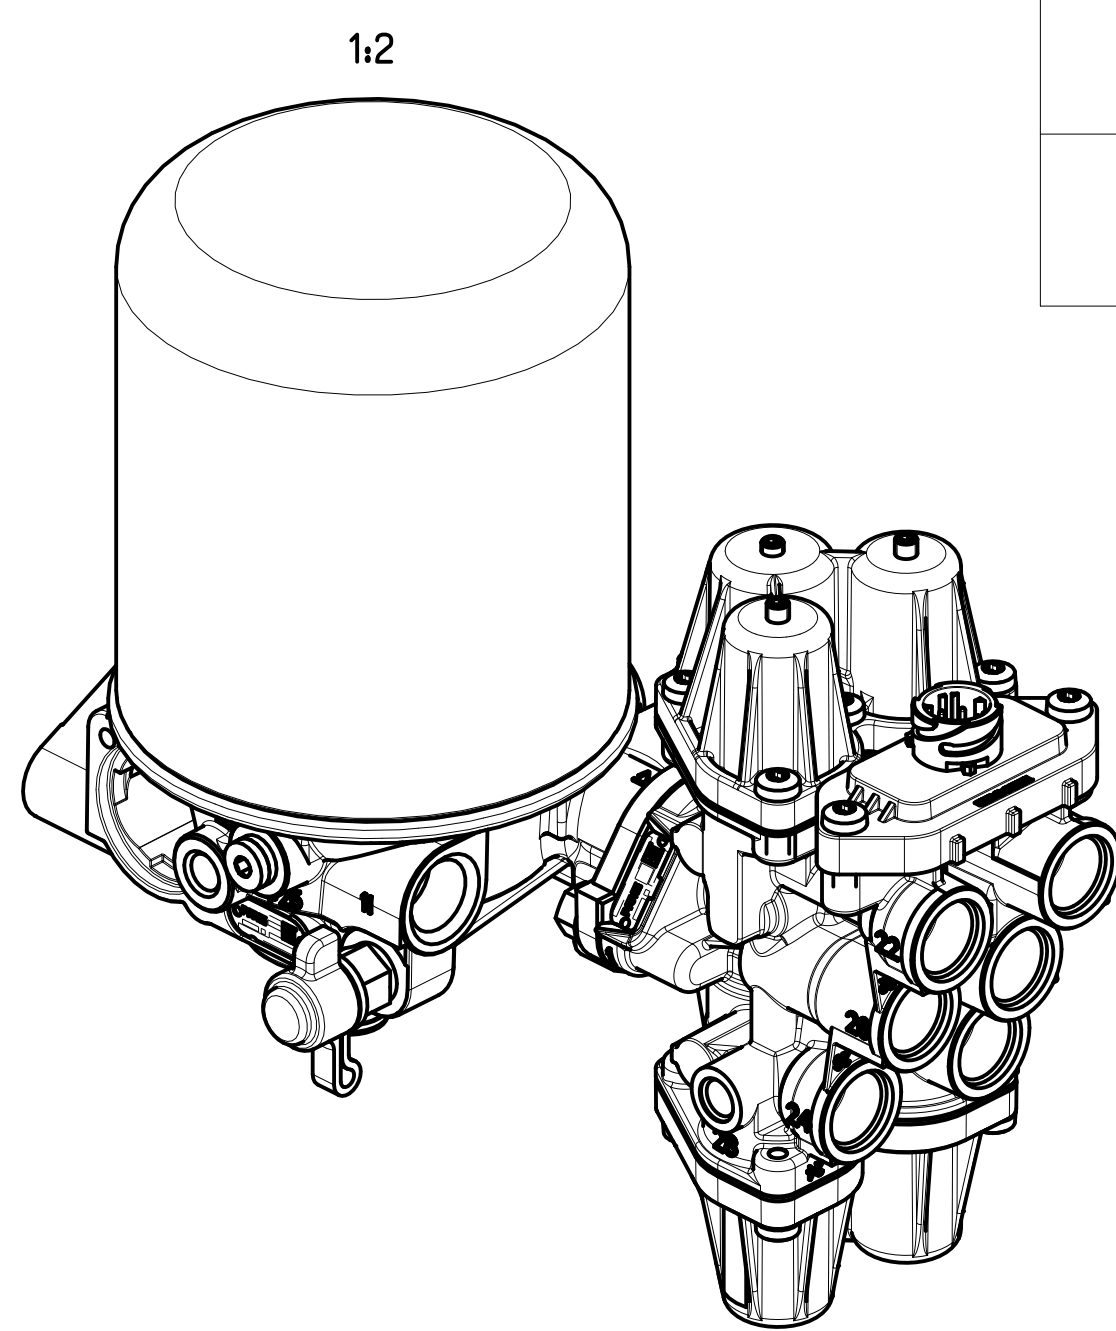

1 Free from paint
Farbfrei
Exempte de peinture
Non verniciare

AIR DRYER LUFTTROCKNER DESSICATEUR ESSICCATORE	PRO 400 001 0
FOUR CIRCUIT PROTECTION VALVE VIERKREIS-SCHUTZVENTIL VALVE DE PROTECTION (A 4 CIRCUITS) VALVOA DI PROTEZIONE (A 4 CIRC.)	PRO 934 005 0
PRESSURE SENSOR UNIT DRUCKSENSOR-EINHEIT UNITÉ DE SEPTEUR DE PRESSION UNITÀ DI SENSORE DI PRESSIONE	332 500 501 1

[illegible]

